

Outdoor Camera System Precautions



Route the power cord to meet these safety regulations:

1) Do not route in an area where the plug is exposed to moisture.

2) Prevent physical damage to the power cord and potential harm to people by properly routing it to the nearest power outlet.



Do not plug your Outdoor Camera into a surge protector or UPS.

Tips & Tricks



Mount the camera high and out of reach so the angle of the front of the camera tilts down, allowing the sun-shield to shade the sensor, thus providing the best quality picture.



Mount the camera out of reach of water sprinklers or pressure washers.



Adjust motion-recording sensitivity and detection zones on the Setup > Recording screen in the WiLife Command Center. See the User Guide for details.